



PART# 999700
07-2017 JEEP WRANGLER
ADJUSTABLE TRAC BAR

Parts List: 1 FORGED STEEL TRAC BAR



Aproximate
install time .5 hrs



NOTE

Please double check the parts list before beginning installation, to ensure all parts are present. If there is something missing, please contact Maxtrac Suspension immediately (714) 630-0363.


PRIOR TO INSTALLATION:

1. *Factory service manual is recommended to have on hand.*
2. *Secure and properly block vehicle prior to beginning installation*
3. *Always wear safety glasses when using power tools or working under the vehicle*
4. *Modifications to any part will void the warranty associated with that product. AFTER*

REMOVING PARTS FROM VEHICLE, SAVE HARDWARE FOR REINSTALLATION.

Step 1: Place an adjustable jack under the front bumper so that you can adjust the height of the body. (NOTE: This will allow you to take tension off the bolts and remove/install the trac bars easier)


Step 2: Loosen both the upper and lower front trac bar bolts, slightly lift the jack up to take tension off of the bolts, remove the bolts and then remove the factory trac bar.

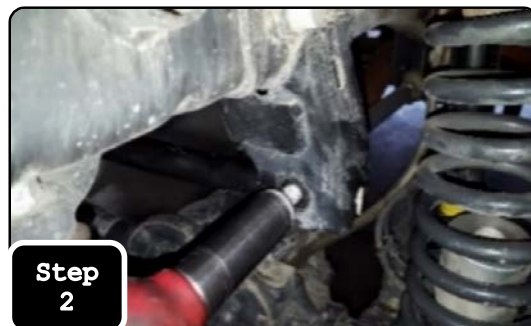



Step 3: Install the new Maxtrac adjustable trac bar with the U shape over the differential using the factory bolts. Adjust the height of the body as necessary so that the bolts are easy to install. let the jack all the way down, jounce the front bumper a few times to settle the suspension and then tighten both bolts.



Step 4: Take a measurement between the tire and the frame on both sides and see how far off center the axle is.

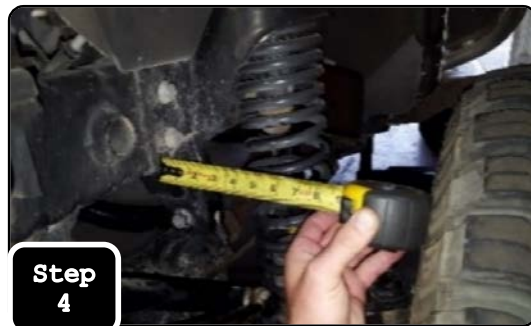

Step 5: Loosen the adjustment collar clamps and slide them out of the way. now twist the adjustment collar out and keep comparing your measurements until you measure the same distance from frame to tire on both sides.

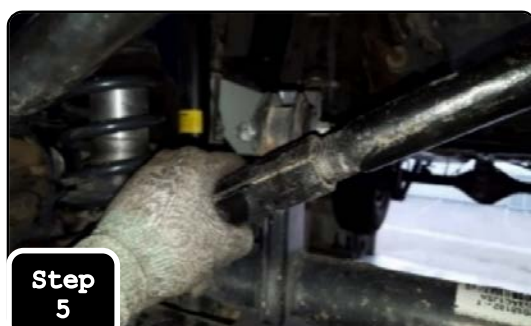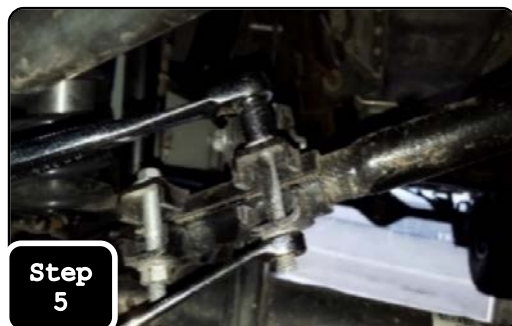

Step 6: Once both measurements are equal, slide the clamps back into place and tighten them.

Complete

