



836410R

2010+ TOYOTA 4RUNNER REAR 1.25" rear spacer

(2) 836410R fabricated spacers

STEP 1: Jack the axle up and re-attach both shocks and both sway bar end links.

NOTE

Please double check the parts list before beginning installation, to ensure all parts are present. If there is something missing, please contact Maxtrac Suspension immediately (714) 630-0363

PRIOR TO INSTALLATION:


- 1. Factory service manual is recommended to have on hand.**
- 2. Secure and properly block vehicle prior to beginning installation**
- 3. Always wear safety glasses when using power tools or working under the vehicle**
- 4. Modifications to any part will void the warranty associated with that product.**

 **AFTER REMOVING PARTS FROM VEHICLE, SAVE HARDWARE FOR REINSTALLATION.**

READ THE INSTRUCTIONS THOROUGHLY AND COMPLETELY BEFORE BEGINNING THE INSTALLATION.



STEP 2: Unbolt both rear shocks at the axle and separate.

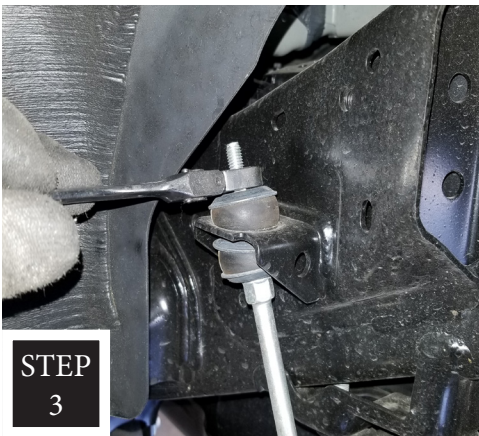

STEP 3: Unbolt the top of both rear sway bar end links and remove the upper bushings.



STEP 4: Remove both rear coils with the internal bump stop and separate the bump stop.



STEP 5: Thread the new spacer into the center of the bump stop until tight.


READ THE INSTRUCTIONS THOROUGHLY AND COMPLETELY BEFORE BEGINNING THE INSTALLATION.



STEP 6: Loosen both trac bar bolts and remove just the upper bolt.



STEP 7: Lower the axle enough to re-install the coils and spacers. Make sure that there is plenty of slack in the brake lines and abs lines when doing so.

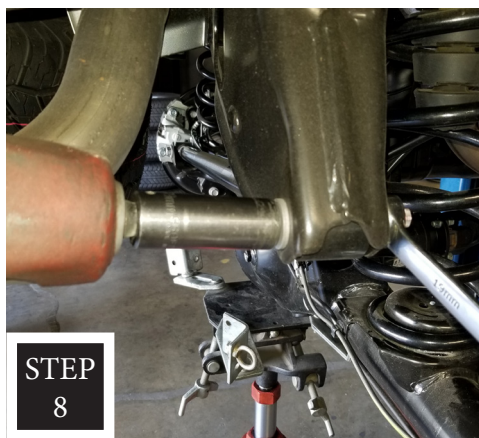

STEP 8: When the truck is back on the ground at ride height, re-attach the trac bar and tighten both ends.