



PART# 301960C

2019+ GM 1500 2WD/4WD

**REAR FRAME SUPPORT KIT
C-NOTCH**



4 HOUR INSTALL TIME

Components	Hardware	Hardware Pack #
(1)DRIVE SIDE FRAME SUPPORT	(8) 1/2-13 X 1 1/2" HEX CAP SCREW	
(1)PASS SIDE FRAME SUPPORT	(16) 1/2-13 NYLOCK NUT	
(1) 301960C-2D INNER BOLT PLATE	(24) 1/2" FLAT WASHER	
(1) 301960C-2P INNER BOLT PLATE	(8) 1/2" SPLIT LOCK WASHER	3019H-C-NOT
(2) 301960C-3 INNER NUT PLATE	(2) 3/8-16 NYLOCK NUT	
(2) 301960C-4 INNER NUT PLATE	(2) 3/8" FLAT WASHER	
(2) FLAT BUMP STOPS	(2) M8-1.25 X 20	
(1) 301960C-5 BRAKE LINE BRACKET	(2) M8-1.25 NYLOCK NUT	
	(4) M8 FLAT WASHER	

NOTE: THIS KIT REQUIRES CUTTING AND DRILLING OF THE FRAME, THE BED RIB, AND THE EXHAUST

-DOES NOT FIT LONG BED MODELS, BUT CAN BE MODIFIED TO FIT THEM. SEE STEP 21 FOR HOW TO MODIFY.

Please double check the parts list before beginning installation to ensure all parts are present. If there is something missing, please contact Maxtrac Suspension (714) 630-0363. Please have the boxes present if parts are missing or damaged

PRIOR TO INSTALLATION:


1. Factory service manual is recommended to have on hand.
2. Secure and properly block vehicle prior to beginning installation.
3. Always wear safety glasses when using power tools or working under the vehicle
- 4 Modification to any part will void the warranty associated with that product

AFTER REMOVING PARTS FROM VEHICLE, SAVE HARDWARE FOR REINSTALLATION

EDITED 6/27/2025





Step 1 Jack up the rear of the truck and support under the frame, in front of the axle, with jack stands.

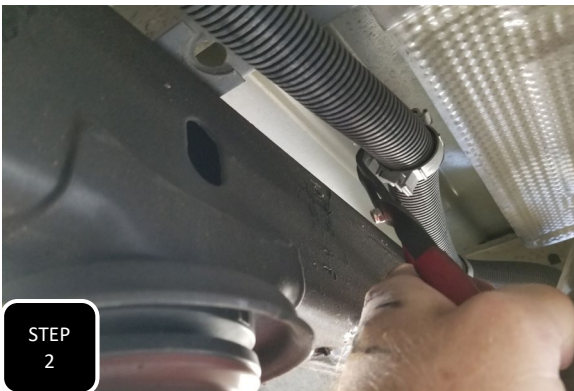

Step 2 Separate the plastic guide clip attaching the wire harness on the inside of the passenger side of the frame, from the frame and hook it out of the way with a bungy cord or strap.





Step 3 Unbolt the brake line guide bracket located on the inside of the driver's side frame and hook it out of the way with a bungy cord or strap.

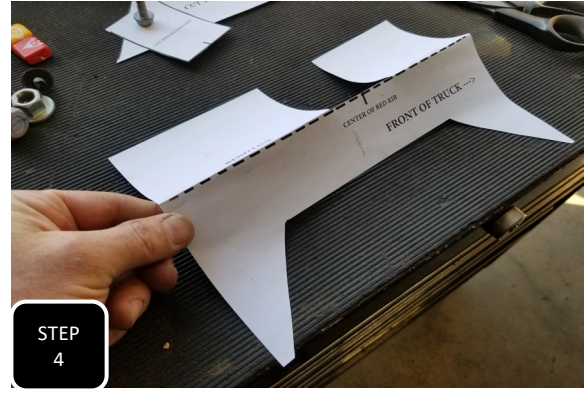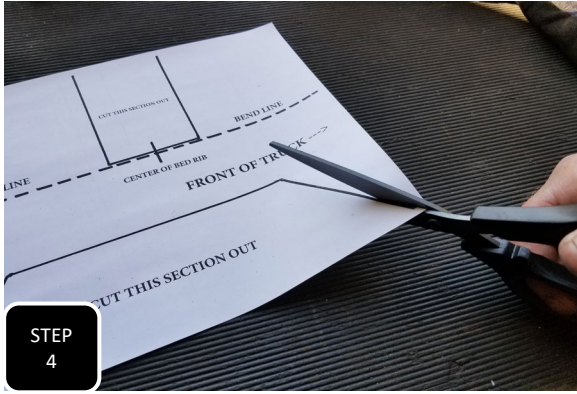

STEP 4

STEP 4

Step 4 Cut out the two designated sections in the provided template and fold it to a 90 degree angle on the dashed line.

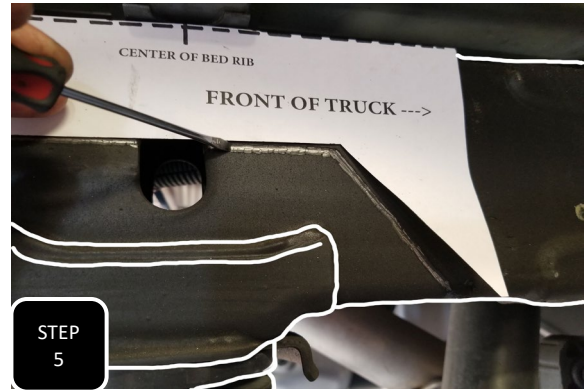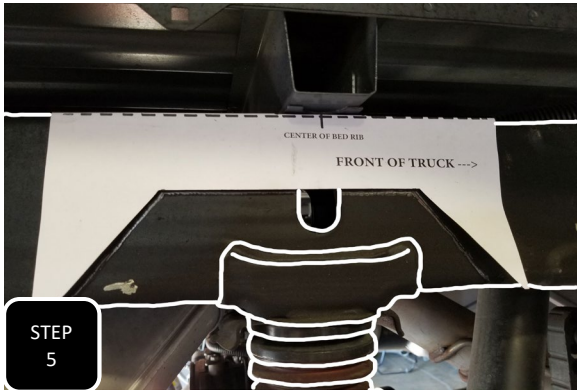

STEP 5

STEP 5


Step 5 Bent with the writing outward, the template will line up with the outside of the passenger side of the frame and the inside of the driver's side frame. Using a small screw driver, scratch the under coat off along the inside of the notch cut out. Next, fold the template the other way and do the same with the outside of the driver's side frame and the inside of the passenger side frame.



STEP 6

STEP 6


Step 6 Using a suitable cutting devise such as a plasma cutter or a cut off wheel, cut out the notched section and clean up the edges with a sander. Test fit the C-notch and clearance as necessary until it fits flush to the frame.

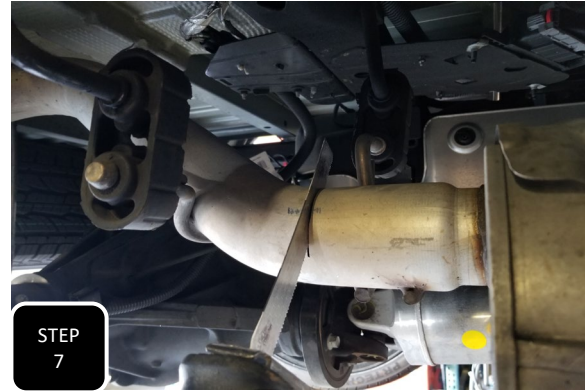



Step 7 The factory exhaust will need to be cut off just before the axle. Start by spraying WD40 on all of the rubber bushings attaching the exhaust to the frame and then get the bushings started over the head of the hanger. Next, using a reciprocating saw, completely cut through the exhaust tubing just before the axle and then remove and discard.




Step 8 Clamp the C-notch to the frame and either mark the holes for drilling or more preferably, use a transfer punch to mark the 8 side holes and 4 holes underneath the frame.

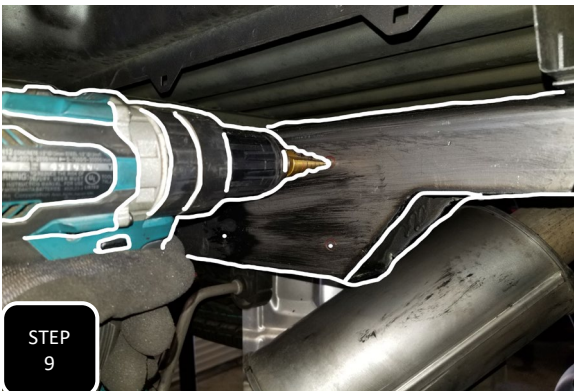


Step 9 Using a power drill and 9/16" drill bit, drill out all 12 of your marked holes on each frame rail and then test fit the inner bolt plate. Enlarge or correct your holes until all 8 bolts slide through the holes and allow the inner plate to sit flat against the inside of the frame.

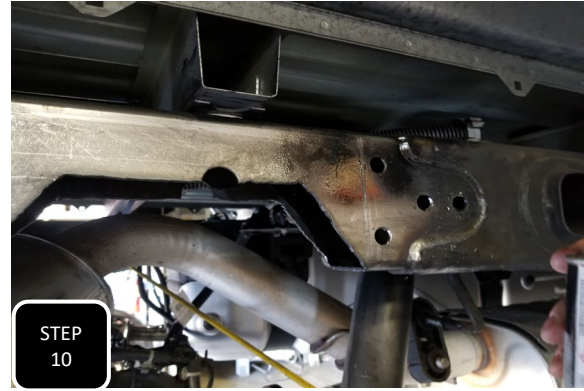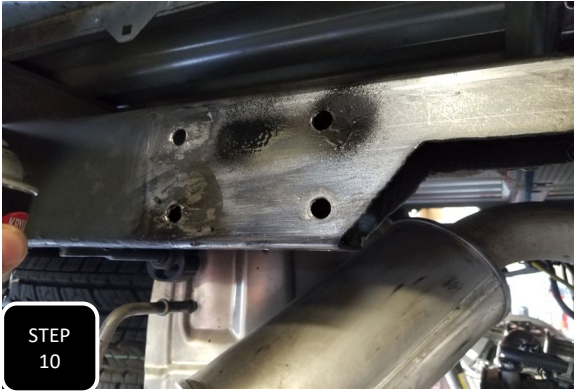

Step 10 Smooth out any chunky spots of the factory under coat and then spray paint all raw surfaces of the factory frame for rust prevention.

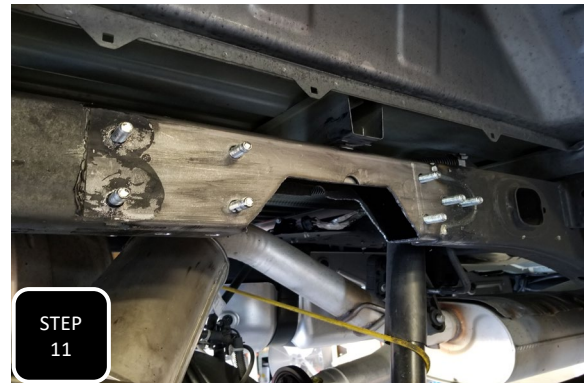

Step 11 Slide the inner support plate, with the 8 bolts welded to it, into the frame and poke the bolts through the holes that you just drilled. **NOTE: THE PLATES ARE SIDE SPECIFIC AND THE TRIANGULATED END NEEDS TO FACE THE FRONT OF THE TRUCK.**

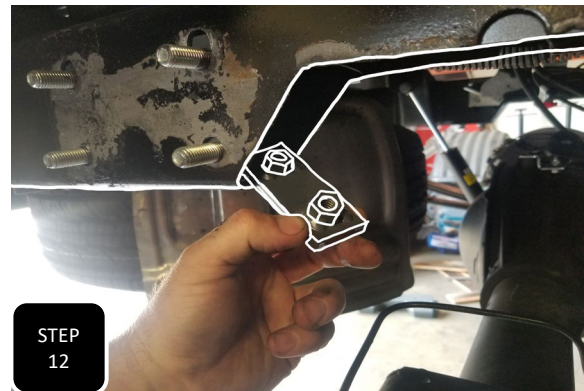


Step 12 Slide the -3 and -4 nut plates into the bottom of the frame. The plate with the nuts that are closer together will go into the cut out towards the front of the truck and the other towards the rear of the truck.




Step 13 First install the bump stops onto both frame supports. Next, slide the frame support onto the frame and loosely start all of the mounting hardware. Once all of the hardware is started, then tighten down the side nuts first and the bottom bolts last.



Step 14 Locate the heat shield on the pass side of the truck above the rear differential. Draw a straight line 4 inches from the edge and as long as about 5 inches in front and behind the bed rib. Next, measure and draw a line 4 inches from the bed rib towards the front of the truck and 3.5 inches from the rib towards the rear of the truck.

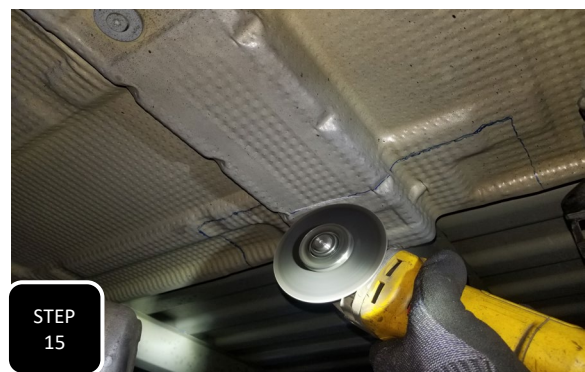

Step 15 This marked section of heat shield will now need to be cut out using a suitable cutting device such as a cut off wheel.

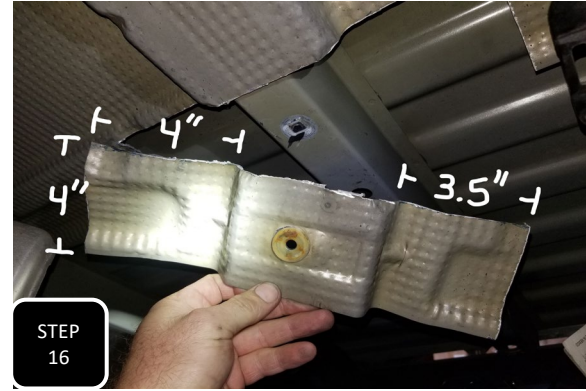

Step 16 Once all the way cut out, remove the mounting bolt in the cut area and remove the cut section of heat shield.



Step 17 Measure and mark a line 15 inches out from the heat shield that you just cut out then draw a cut line up both sides and along the top .



Step 18 Using a suitable cutting device such as a cut off wheel, completely cut out and remove this section of bed rib above the rear differential.




Step 19 Clean up any and all sharp edges and then spray paint to prevent rust.



Step 20 Install the bracket line relocation bracket to the frame using the factory bolts and then attach the factory bracket to the new bracket using the provided 8mm bolts, nuts, and washers.



AT A 6" DROP, YOU WILL HAVE ABOUT A 3" GAP BETWEEN THE AXLE AND BUMP STOP AT RIDE HEIGHT.

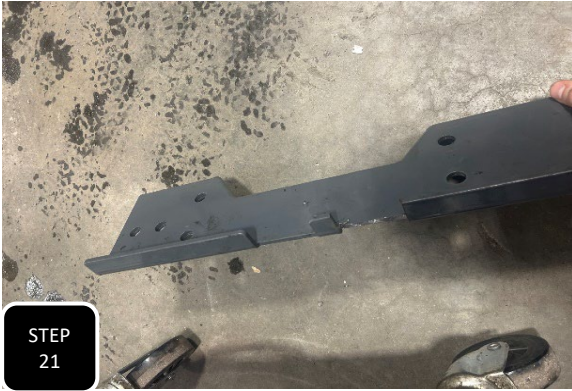

Step 21 We have not been able to officially fit our C-notch to a long bed, but have had customer's whom have taken it upon themselves to do so. From what we know, the reference bed rib is in a different location on the long beds so an additional notch will need to be cut out of the supplied frame support to properly align the notch with the axle.



Step 22 With the vehicle at ride height, position the frame support up, against the frame and align the bump stop with the center of the axle. Next, mark where the bed rib needs to be cut out and using a suitable cutting device, notch out the frame support. Modify the provided template to match your new notch and then proceed with the rest of the install.



MaxTrac
s u s p e n s i o n

RIDE HEIGHT SHEET

*THIS SHEET MUST BE FILLED OUT PRIOR TO CALLING WITH ANY DISCREPENCIES

YEAR _____ MAKE _____ MODEL _____

4WD / 2WD / AWD

MEASUREMENTS

*MOST ACCURATE MEASUREMENT IS FROM THE BOTTOM OF THE RIM, STRAIGHT UP TO THE BOTTOM OF THE FENDER

*TRUE HEIGHT WONT BE ACCURATE UNTIL VEHICAL IS ALIGNED

*THE VEHICLE'S CASTER WILL BE INCREASED OR DECREASED IF ONLY THE FRONT OF THE VEHICLE IS MODIFIED

	BEFORE	AFTER	DIFFERENCE
DRIVER FRONT	_____	_____	_____
DRIVER REAR	_____	_____	_____
PASSENGER FRONT	_____	_____	_____
PASSENGER REAR	_____	_____	_____

LIMITED LIFETIME WARRANTY

Max Trac Suspension makes no warranty, expressed or implied, as to the merchantability, fitness for purpose, description, quality, productiveness, accuracy or any other matter with respect to every product, all such warranties being hereby specifically and expressly disclaimed by Max Trac. Max Trac may offer technical advice or assistance with regard to the products based on laboratory and/or field experience and customer understands and agrees that such advice represents only good faith opinions and does not constitute a warranty or guarantee. The sole and express warranty provided by Max Trac is to warrant that the products sold as listed comply with Max Trac's specification at the date and time of manufacture. Max Trac makes no warranty that such products shall meet such specification at any time after installation of products. Use of such product is specifically not warranted, and Max Trac specifically excludes from this express warranty parts subject to normal wear and tear after one year, finish after one year, damage resulting from failure to follow recommendations in installation manuals, competition or off-road use, and damages caused by aftermarket products. Max Trac's liability and customer's exclusive remedy for any breach of this limited express warranty is limited to repair, replacement, or refund at Max Trac's option and in Max Trac's sole discretion. There are no warranties which extend beyond the description on the face hereof.

Our limited lifetime warranty excludes the following items: bushings, bump stops, ball joints, tie rod ends, rod end/heim joints, and shock absorbers. These parts are subject to immediate wear and tear and are not considered defective when worn. They are warranted for twelve (12) months from the date of purchase only for defects in workmanship.

This Max Trac warranty is void if (1) the vehicle is not aligned after kit installation, (2) proper maintenance is not routinely performed, (3) the Max Trac products are misused or abused in any way in either installation or service, or (4) the products are used in a way that violates federal, state, or local law or regulation in any respect. Max Trac is not responsible for vehicle compatibility with other aftermarket products. Warranty coverage does not include consumer opinions regarding ride comfort, fitment and design after product installation.

Max Trac reserves the right to change, modify or cancel this warranty without prior notice.

WARRANTY RETURN

Contact Maxtrac by sending an email with a copy of the original purchase receipt, along with photographs clearly illustrating the failure mode.

1. Upon validating the information provided, Maxtrac will issue a Return Manufacturer Authorization number (RMA#).
2. Return your product to Max Trac Suspension at your expense in order to execute a claim under this warranty.
3. Include the RMA# on the outside of the box. Any returns without the RMA# will be refused.

NON-WARRANTY RETURN & CREDIT POLICY

Your item must be in its original unused and resalable condition to be returned, unless there is a manufacturing defect. You must return the item within 30 days of your purchase. Otherwise, there will be an additional restocking fee.

1. Please contact Max Trac Suspension at (844) 535-1668 to obtain a Return Manufacturer Authorization Number (RMA#).
2. Return your product to Max Trac Suspension at your expense.
3. Include the RMA# on the outside of the box. Any returns without the RMA# will be refused.

Return Exceptions

Merchandise that has been installed, used, or altered may be subject to no credit.

Restocking Fee

All items are subject to a restocking fee based on the condition of the packaging and product.

Max Trac Suspension does not credit shipping and handling. Credit minus applicable restocking fee will be determined and issued within 10 business days of product receipt.

All returns will be credited to your Maxtrac account.



INSTALLATION WARNINGS

READ INSTRUCTIONS AND WARNINGS COMPLETELY PRIOR TO INSTALLATION.

MAXTRAC IS NOT RESPONSIBLE FOR ANY DAMAGE OR INJURY DUE TO IMPROPER INSTALLATION OR MAINTENANCE.

Installer is responsible to insure a safe and controllable vehicle after performing modifications. All steps and procedures described in these instructions were performed while the vehicle was properly supported on a two post vehicle lift with safety jacks. Included instructions are recommended guidelines only.

Max Trac Suspension recommends reference to the OE Service Manual corresponding to the model and year of vehicle when either disassembling or assembling factory and related components.

Use caution during all disassembly and assembly steps to insure suspension components are not over extended, causing damage to any vehicle components and parts included in this kit. Unless otherwise specified, tighten all bolts and fasteners to standard torque specifications listed within the OE Service Manual.

Suspension components that use rubber or urethane bushings should be tightened with the vehicle at normal ride height. This will prevent premature wear or failure of the bushing and maintain ride comfort.

Larger tire and wheel combinations may increase leverage on suspension, steering, and related components.

Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle ride height. Always measure the vehicle ride height prior to beginning of installation.

MAXTRAC SUSPENSION DOES NOT ADVISE USING WHEELS WIDER THAN 9" OR WHEELS WITH LESS THAN 4.5" BACKSPACING. DOING SO WILL RESULT IN VOIDING ANY AND ALL MANUFACTURER WARRANTIES

Max Trac Suspension does not recommend the combined use of suspension lifts, body lifts, or other lifting devices.

Final Checks & Adjustments

Once the vehicle is lowered to the ground, check all parts which have rubber or urethane components to ensure proper torque. Torque lug nuts to the wheel manufacturer specs.

Move vehicle backwards and forwards a short distance to allow suspension components to settle. Turn the front wheels completely left then right and verify adequate tire, wheel, brake line, and ABS wire clearance.

Test and inspect steering, brake and suspension components for tightness and proper operation. Inspect brakes, hoses, and ABS lines for adequate slack at full extension, and adjust as necessary.



ADDITIONAL WARNINGS

WARNING

Max Trac Suspension products should ONLY be installed by a certified professional mechanic with experience working on and installing suspension products. Professional knowledge and skill will typically yield the best installation results.

If you need a list of installers in your area, please contact Max Trac Suspension customer service to find one of our authorized dealers. Max Trac Suspension does not warrant work performed by any dealer, installer, or mechanic.

- All lifted vehicles may require additional driveline modifications and/or balancing.
- A Factory Service Manual for your specific Year/ Make / Model should be referenced during installation.
- Use of a vehicle hoist will greatly reduce installation time.
- Speedometer / computer calibration is required if changing +/- from factory tire diameter.
- Vehicle must be in excellent operating condition. Repair or replace any and all worn or damaged components prior to installation.

FAILURE TO PERFORM POST INSTALLATION INSPECTION AND/OR CHECKS MAY RESULT IN VEHICLE COMPONENT DAMAGE AND/OR PERSONAL INJURY OR DEATH.

RECHECK ALL HARDWARE FOR PROPER TORQUE VALUES AFTER 500 MILES, AND THEN PERIODICALLY AT EACH SERVICE INTERVAL THERAFTER.

Vehicle Handling Warning

Increasing the height of your vehicle raises the center of gravity and **WILL** affect stability and control. Use caution on turns and when steering. Vehicles with larger tires and wheels will handle differently than stock vehicles. Take time to familiarize yourself with the handling of your vehicle after product installation.

Wheel Alignment/Headlamp Adjustment

It is necessary after installation to have a wheel alignment performed by a certified alignment technician. Align the vehicle to factory specifications. It is recommended that your vehicle alignment be checked after any off-road driving. In addition to vehicle alignment, it is necessary to check and adjust vehicle head lamps for proper aim and alignment. If the vehicle is equipped with active or passive safety/collision monitoring and / or avoidance systems including, but not limited to, camera-or radar-based systems, check and adjust your vehicle's systems for proper aim and function.

Braking Warning

Generally, braking performance and capabilities are decreased when significantly larger or heavier tires and wheels are used. Take this into consideration while driving. Also, changing axle gear ratios or using tires that are taller or shorter than factory height will cause an erroneous speedometer reading. On vehicles equipped with an electronic speedometer, the speed signal impacts other important functions as well. Speedometer recalibration for both mechanical and electronic types is highly recommended.




SAFETY WARNINGS

SAFETY WARNING

MISUSE OF THIS PRODUCT COULD LEAD TO INJURY OR DEATH.

- Suspension systems or components that enhance the on and off-road performance of your vehicle may cause it to handle differently than it did from the factory. EXTREME CARE must be used to prevent loss of control or vehicle rollover during operation.
- ALWAYS operate your vehicle at reduced speeds and maintain distance between vehicles and obstacles to ensure your ability to control your vehicle under all driving conditions. Failure to drive safely may result in serious injury or death to the driver and passengers.
- Driver and passengers must ALWAYS wear seat belts, avoid rapid steering angles and rates and other sudden maneuvers.
- You should NEVER operate your vehicle under the influence of alcohol or drugs.
- Please check all factory components for excessive wear and tear. Please replace worn factory parts before installing any suspension kits. Failure to do so will void any Max Trac warranty.
- Please inspect all wheel bearings and hub bearings for excessive wear and replace worn components before installing suspension kits. These hub and wheel bearings may wear out sooner with installation of larger tires and wheels. MaxTrac does not warranty these factory parts at any time, also using any wheel that MaxTrac does not recommend will void any warranty of MaxTrac components.
- Constant maintenance is required to keep your vehicle safe. Thoroughly inspect your vehicle before and after every off-road use.
- It is the responsibility of the retailer and/or the installer to review all state and local laws with the end user of this product related to bumper height laws and the lifting of a vehicle before the purchase and installation of any Max Trac products.
- It is the responsibility of the driver to check the area around the vehicle for obstructions, people, and animals before moving the vehicle.
- All lifted vehicles have increased blind spots. Take note of these prior to operating the vehicle.

DAMAGE, INJURY AND/OR DEATH CAN OCCUR IF ANY OF THE ABOVE WARNINGS ARE NOT FOLLOWED.

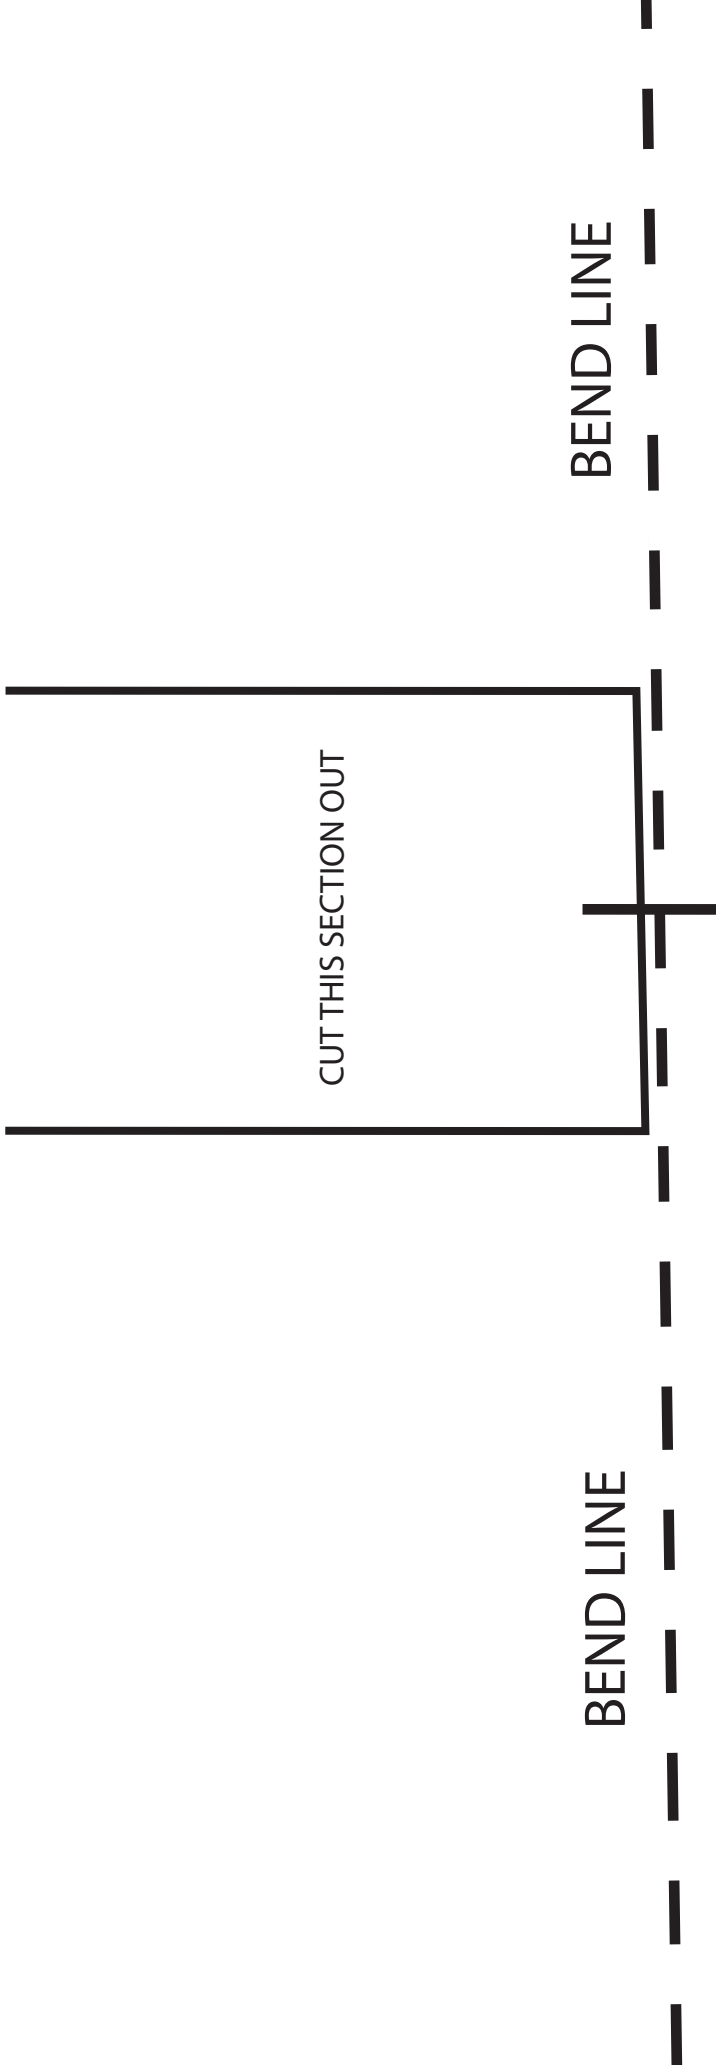

CUT THIS SECTION OUT

BEND LINE

BEND LINE

CENTER OF BED RIB

FRONT OF TRUCK ---->



CUT THIS SECTION OUT